


Limit Switch (L/S) Adjustment

Adjustment required when: alarm sounds continuously when alarm board is turned on and stops sounding as soon as the alarm board is turned off.


How to perform adjustment:

- Turn slide switch on alarm board off
- Push paddle inward to “unlocked” position.
- Bend metal L/S arm to 90 degree angle. The bend must be near the black L/S button.
- Pull paddle out to “locked” position
- Black L/S button will click when depressed by L/S arm

Left Hinged Door Unlocked Position

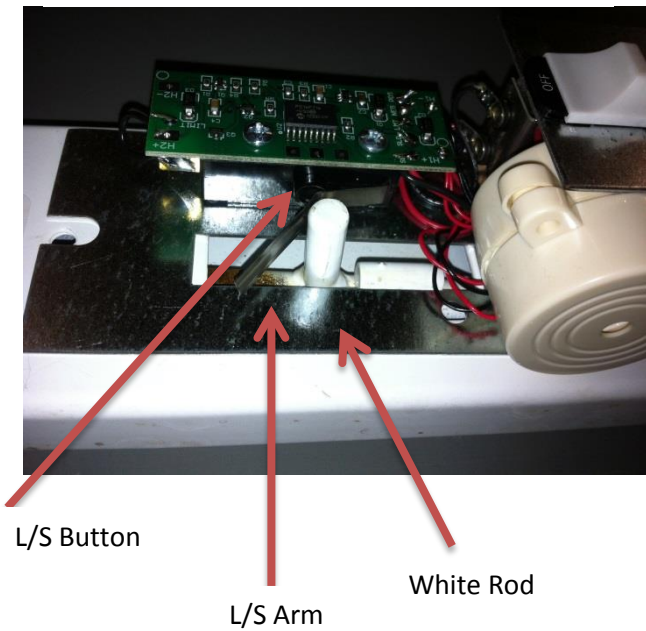

Right Hinged Door Unlocked Position

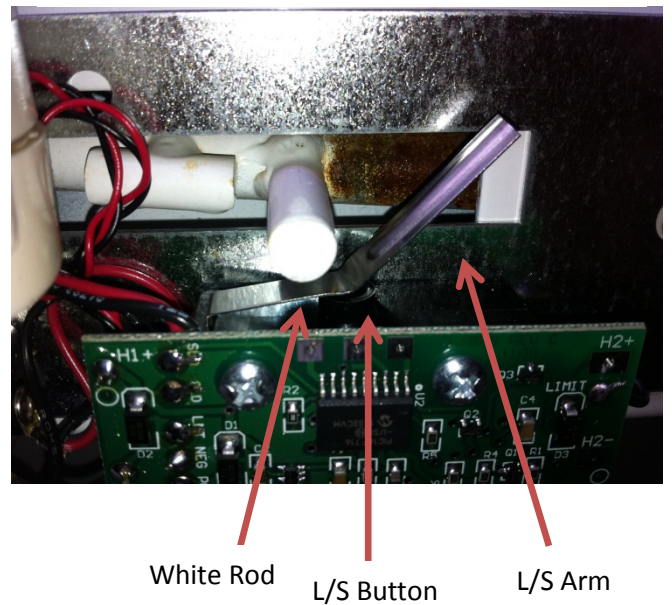

Left Hinged Door Locked Position



Right Hinged Door Locked Position

